

 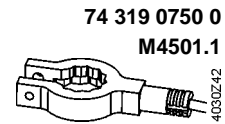


de Montageanleitung
 en Mounting instructions
 fr Instructions de montage
 sv Monteringsinstruktion
 nl Montage-aanwijzing
 it Istruzioni di montaggio
 fi Asennusohje
 es Instrucciones de montaje
 da Monteringsvejledning
 pl Instrukcja montażu
 cz Montážní návod
 hu Szerelési útmutató
 el Οδηγίες εγκατάστασης
 ru Инструкция по установке
 zh 安裝指導

Stösseldichtung
 Stem sealing gland
 Joint d'étanchéité d'axe
 Spindeltätning
 Spindelafdichting
 Premistoppa stelo
 Karatiiviste
 Racor de cierre de vástago
 Tætningsflange for ventilspindel
 Uszczelnienie trzpienia
 Ucpávka vřetene
 Szelepszár tömítés
 Στέλεχος άξονα
 Сальник уплотнения штока
 阀杆密封函

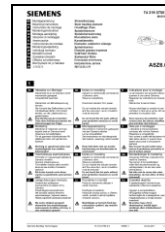

$T \leq 0\text{ }^{\circ}\text{C}$
VVF..
VXF..



ASZ6.6

4030Z42

$T \leq -5\text{ }^{\circ}\text{C}$
VVF43/53..
VXF43/53..

 


ASZ6.6

4030Z42



4 284 8806 0



4030Z39



50...55 Nm

$T \leq -5\text{ }^{\circ}\text{C}$
VVF43/53..
VXF43/53..
≥ DN 65
≥ Series D
VVF63..
VXF63..
≥ DN 65
≥ Series A

 


ASZ6.6

4030Z42






4 679 5629 0



4030Z57



120...130 Nm

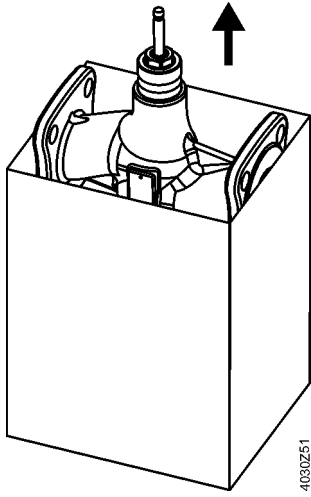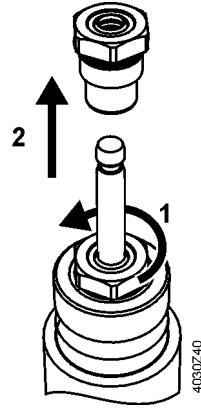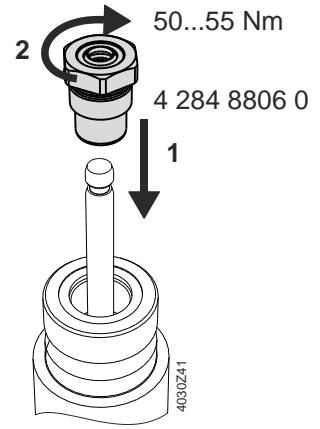1**2****3a****3b**