

Outside Temperature Sensor

Active sensor (0...10 V) for measuring temperature in outdoor areas, in cold stores, greenhouses, production plants and warehouses. NEMA 4X / IP65 rated enclosure.





Type (Overview
--------	----------

Туре	Output Signal Active Temperature	Additional Features
22UT-12	DC 05 V, DC 010 V	External sensor

echnical Data					
Electrical data	Power Supply DC	1524 V	1524 V, ±10%, 0.5 W		
	Power Supply AC	24 V, ±1	24 V, ±10%, 0.8 VA		
	Electrical connection	Removal 2.5 mm²	ble spring loade	ed terminal blo	ock max.
	Cable entry	Cable gland PG11 Ø610 mm, with strain relief Ø68 mm			
Functional data	Multirange	8 measu	8 measuring ranges selectable		
	Output signal active note	•	utput DC 05/10 V with Jumper adjustable oltage output: min. 5 k Ω load		ustable
	Media	Air			
Measuring data	Measured values	Tempera	setti -5050 °C -30130 °F -10120 °C 40140 °F 050 °C 40140 °F 0250 °C 30480 °F		
	Measuring range temperature	Attention restricted			
		S5 S6 S7	0100 °C -2080 °C 0160 °C	40240 °F 4090 °F 0150 °F	
	Accuracy temperature active	±0.5 °C @ 21 °C [±0.9 °F @ 70 °F]			
Materials	Cable gland	PA6, white			
	Mounting plate	Lexan, silvergray RAL7001			
	Housing	Bottom: I	Cover: Lexan, white Bottom: Lexan, white Seal: 0467 NBR70, black		



Technical data sheet	22UT-12
----------------------	---------

Safety data

Ambient humidity	85% r.H., non-condensing
Ambient temperature	-3550 °C [-30120 °F]
Medium temperature	-3550 °C [-30120 °F]
Housing surface temperature	Max. 70 °C [160 °F]
Protection class IEC/EN	III Safety Extra-Low Voltage (SELV)
Protection class UL	UL Class 2 Supply
EU Conformity	CE Marking
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-9
Certification UL	cULus acc. to UL60730-1A/-2-9, CAN/CSA E60730-1:02/-2-9, CE acc. to 2004/108/EC and 2006/95/EC, NEMA 4X, IP65, UL Enclosure Type 4X
Degree of protection IEC/EN	IP65
Degree of protection NEMA/UL	NEMA 4X
Quality Standard	ISO 9001
Weight	0.11 lbs

Safety notes



The installation and assembly of electrical equipment should only be performed by authorized personnel.

This device has been designed for use in stationary heating, ventilation and air conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten human, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Remarks

General remarks concerning sensors

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage (±0.2 V). When switching the supply voltage on/off, onsite power surges must be avoided.

Accessories


Scope of delivery

Mounting plate Dowel

Screws



Wiring diagram

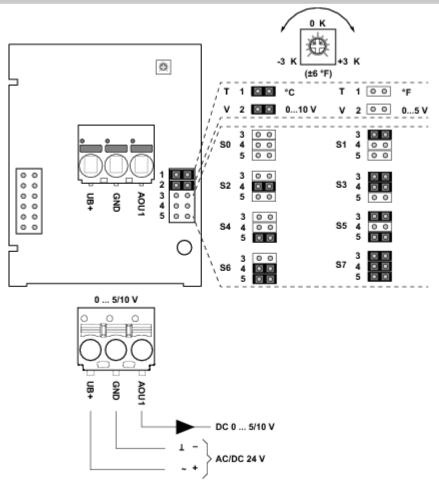

The adjustment of the measuring ranges is made by changing the bonding jumpers. The output value in the new measuring range is available after 2 seconds.

Setting	range [°C]	range [°F]	Factory setting
S0	-5050 °C	-30130 °F	~
S1	-10120 °C	40140 °F	
S2	050 °C	40140 °F	
S3	0250 °C	30480 °F	
S4	-1535 °C	0100 °F	
S5	0100 °C	40240 °F	
S6	-2080 °C	4090 °F	
S7	0160 °C	0150 °F	



Dimensions

